

| panel code  | M-3-V2-0    |
|-------------|-------------|
| part number | 07-06-03230 |

## **CAUTION**

- 1. Lethal voltages exist on your vessel. Make sure all shore power, onboard generating sources and batteries are disconnected before beginning installation of your electrical panel.
- 2. AC modules will have lethal voltages on the bus bars and terminals. The coating on these bars is for identification only and should not be relied on as a insulator. Additional safety enclosures may be required in some installations.
- 3. Make sure all AC modules are bonded to the ship's AC ground bus. When grouping modules together to form your panel, a single ground may be used. Use a resistance meter to verify ground to all modules.

| panel code  | M-3-V2-0    |
|-------------|-------------|
| part number | 07-06-03230 |

| SPECIFICATIONS                                |  |
|---|--|
| description:<br>meter type:<br>panel cut out: | monitoring panel (empty)<br>VDO meter 52mm<br>49mm |
| dimensions panel (wxh):                       | 120 x 65 mm  |





### INSTALLATION INSTRUCTIONS

### Install the panel

To install an individual module into a frame or bulkhead, secure the module in place using the M4 screws and O-rings supplied. Individual modules can be assembled into a single larger electrical panel using connector blocks (see drawing on the back of this sheet). Do not use connector blocks at the outside top or bottom edge. This is where the complete panel will be fastened to its frame or bulkhead.

### **FRONTSIDE**

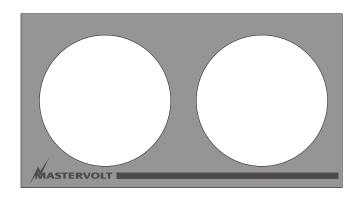

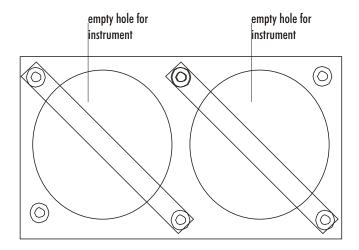

These products fully comply to the latest CE norms in force from Januari 1st 1996 and are produced to ISO 9001 standards.

ISO 9001 **C €** 






#### **HOW TO ASSEMBLE A MASTERVISION PANEL**

- 1. For best results, use Mastervision installation parts
- 2. Use connector bar 07-09-07810 and connector block 07-09-07820 to assemble the panel.
- The mounting bolts used are M4x25
  Secure the bolts wit hte supplied M4 nuts and O-rings.
- To fasten the electrical panel in its frame or bulkhead use the the stencil as supplied to cut the panelhole.

Do not use connector blocks at the outside top or bottom edge. This is where the complete panel will be fastened to its frame or bulkhead.

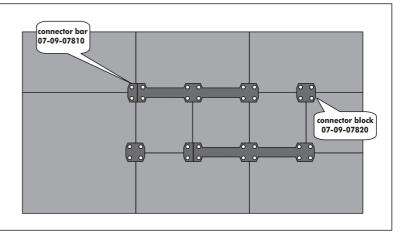


#### HOW TO INSTALL THE BACKLIGHTING SYSTEM:


The Mastervision panels have a two-state backlight system for label illumination The first state is a low intensity green light that illuminates the labels on the panel to enable label viewing in low light conditions, any time the circuit is switched ON or OFF. The second state is a higher intensity yellow DC LED (or orange neon lamp for AC) to indicate when a circuit is switched ON.


Power must be fed to all modules with backlight capability. This is achieved by Verify the backlight AC or DC voltage on each module.


#### Note:

The power supply voltages are equal on all backlight modules, indicator voltages are depending on the type of panel.

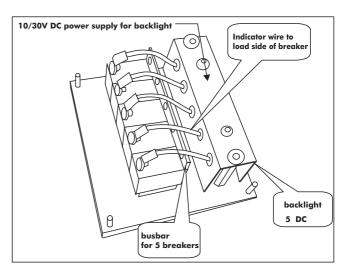

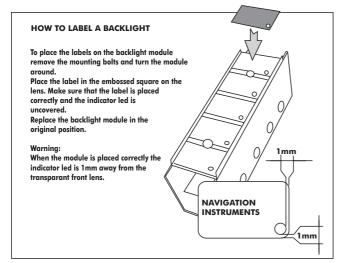

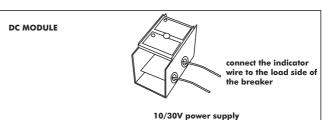

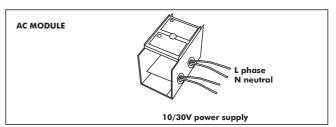

#### CAUTION





## Lethal voltages exist on your vessel. Make sure all shore power, onboard generating sources and batteries are disconnected before beginning installation of your electrical panel.


- 2. AC modules will have lethal voltages on the bus bars and terminals. Additional safety enclosures as the AC protection shield (part no. 07-09-04601-2-3) may be required in some installations.
- 3. Make sure all Ac modules are bonded tot the ship's AC ground bus. When grouping modules together to form your panel, a single ground may be used. Use an ohm meter to verify ground to all modules.

### GENERAL

- Verify the modules you purchased arev configured for the source voltage aboard your vessel / mobile. Refer to the backlight specification.
- Installation of Mastervision panels should be completed by a person with a thorough knowledge of marine / mobile electrical systems.
- 3. Wiring to and from each module should be conform to the local applicable standards and taking into consideration the safety guidelines and measures

Mastervolt can accept no liability for damage due to the use of the panel or due to possible errors in the manual and the results thereof.



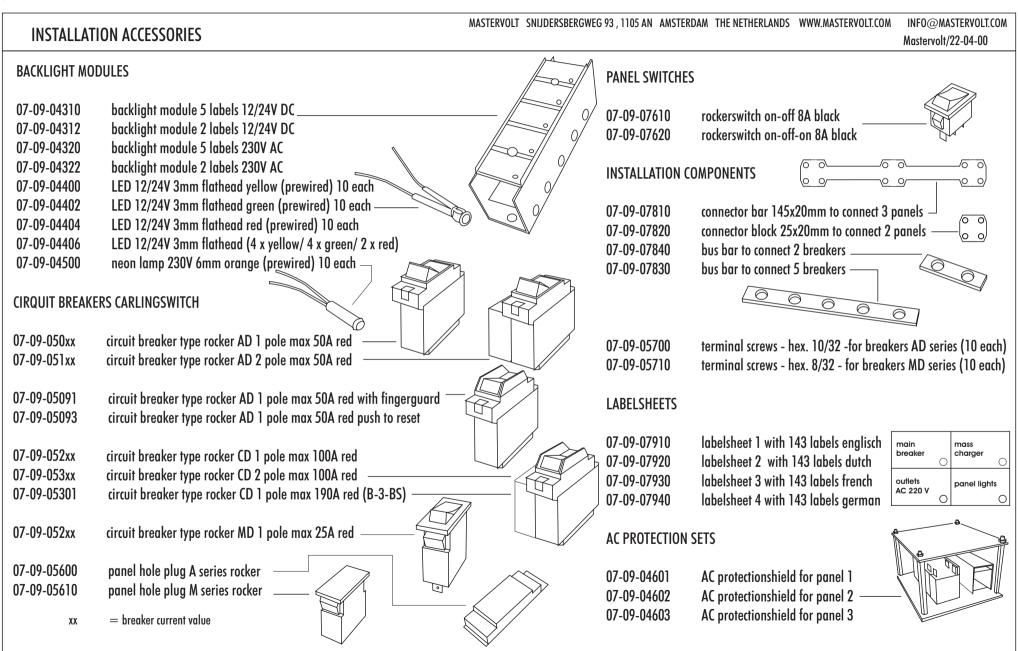



# PANEL CUT OUT SIZING (dimensions in mm)

Mastervolt/ 22-04-00

